 


Ohjekirja Instruction Инструкция






We appreciate your choosing of our shower products, and wish you a pleasant experience with our products and service. Please read Instruction carefully before installation.

IMPORTANT

Please check the shower enclosure for transport damage and completeness before installation. Complaints made following installation cannot be accepted.

Please read carefully the following instructions before installing your shower enclosure to ensure safe and proper use and avoid any injury to either the installer or user .Failure to comply may invalidate your guarantee.

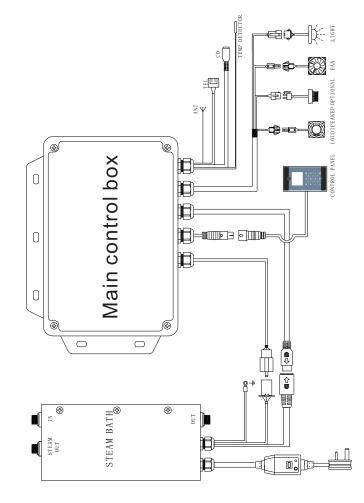

CARE INSTRUCTIONS

page 1

Shower enclosures should be cleaned after every use. To prevent limescale from building up, use a squeegee, a soft cloth or chamois leather-but no cleaning-to wipe off any water droplets left after showering. Residue left by bodycare products (liquid soap, shampoo, shower gel) can also cause substances to accumulate. Use water to rinse away residues after use. All sliding door track fittings should also be cleaned this way-to ensure that they continue run smoothly.

• Don't allow limescale to build up-especially in hard water areas

In no circumstances should you use any abrasive substance

 If you do get a stubborn limescale build up,a mixture of 50:50 vinegar and water will help you to clean it away-but make sure all vinegar is rinsed off completely Never use strong detergents or cleaning agents
 Cleaning materials should wherever possible be rated between PH4 and PH8

Technical Information





Working Conditions and Property							
Voltage Rating: AC 110 V		Normal Frequency:		60Hz			
Rated Current:	13.6A	Power Rating:		1800 W			
Insulating Resistan	ce: > 20 M			Measured upto enterprise safety standard			
Waterproof Grade	: IPX5	Leak Protect	tion: (15 ~ 3		30)mA		
Load Configuration Parameters							
LOAD TYPE	RATED LOAD VOLTAGE	RATED LOAD FREQUENCY	RATED OPERATING QU POWER		QUANTITY		
Steam	Ac110 V	60Hz		1.8 kW	1		
Top Light	Dc 5 V	_		5W	1-2		
Exhaust	Dc12V	_		4W	1		
Electromagnetic Valve	Dc12V	<u> </u>		5W	2		
Speaker	_	_	8	Ω/10W	1-2		
Ozone Sterilizer	Ac12V	60Hz		5W	1		

Due to a policy of continous improvement the manufacturer reserves the right to chartge specification without prior notice

WARNING!

Don't touch the steam outlet when the steam function is on ,and don't block it at anytime.

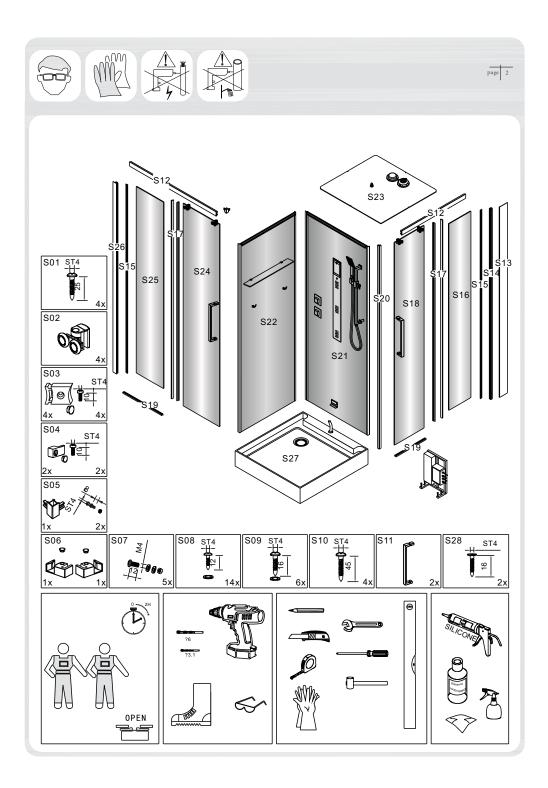

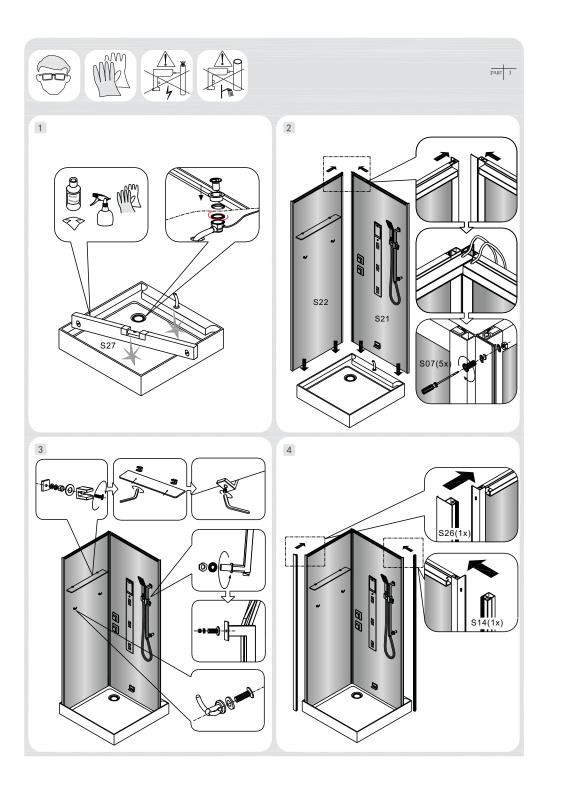

- ② Man-search/store:touchTUN key,tuner will start flashing,press key A volume to choose the one you like more, then touch the keyTUN, store the new tuner (add new tuner into prefer-list).

- 7. Steam

10. Unlocking

When system on, press the key to start steam function, steam mark will be on; (temperature set at 45 degrees and the time set at 45 minutes by default)

When lack of water, that mark flashes and steam shut off.

8. Telephone

When calling comes, speaker stops work pausely, press key to answer it, and tel mark stop flashing; when calling, you could adjust / to choose right volume; and press key again, phone off and speaker will be on.

9. Steam adjustment

- o in-de steam time adjusting:key to choose time, then press \bigwedge key t crease steam time(range from 1-99mins).
- on touch panel in 20secs, system

 will be lo
 cked auto, mark = = will flashes, press key for

 more to unlock panel, then all of key
 s active on.
- When system on, press key to open warning function, the same time light and fan are all starting workingm; touch it again to shut it off.

1. power on/off

When system on standby state, press this wey(2 seconds or more), then display on, simultaneously lights on; Press key again, system off (if no any further operation in 1hour, system auto-off); When system off, touch the panel anywhere, key light will turn on, but it will be off in 5 seconds if no power on. 2. Ozoner

When system on, press the panel key, ozone function will be turn on; then touch it once again, ozoner closes; and the same time, fan and light will be on.

3. Fan

When system on, touch the panel key, fan will work on; then touch it once again, fan function closes; the same time there will be fan mark on/off in display.


4. light


When system on, Press the light - the light turn off, press the light- again, the light turn on. then pressing the light and the keep the light color, and then press the light - again, the light turn off.


5. FM/CD

When system on, firstly touch the panel key, radio function on; and radio tuner display on; then touch its key again, radio function switch into CD; and CD mark will show in display; and touch it once again, CD function shut off.

- 6. Radio tuner searching(radio on work)
- ①、Auto-search/store:press **TUN** key for 2 secs or more,auto-search/store function on,tuner range from 87.5-108.0MHZ(fixed tuner quantity 1-32 available,it depends on signal situation).

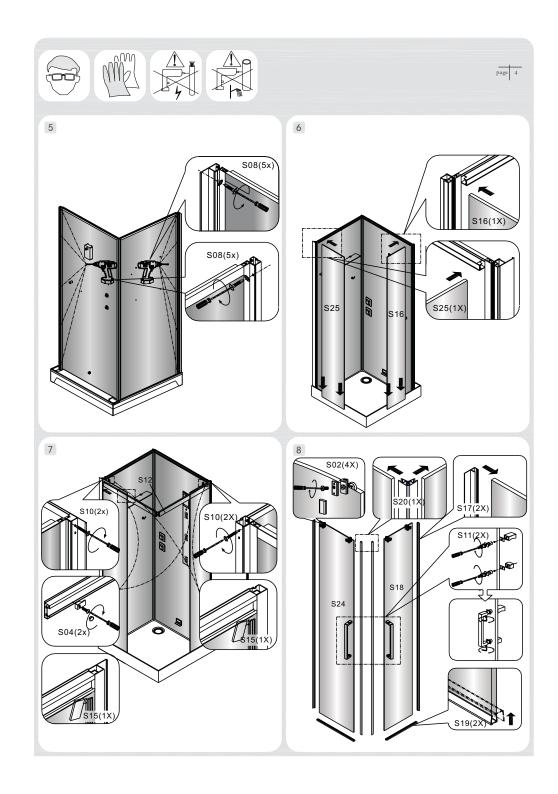

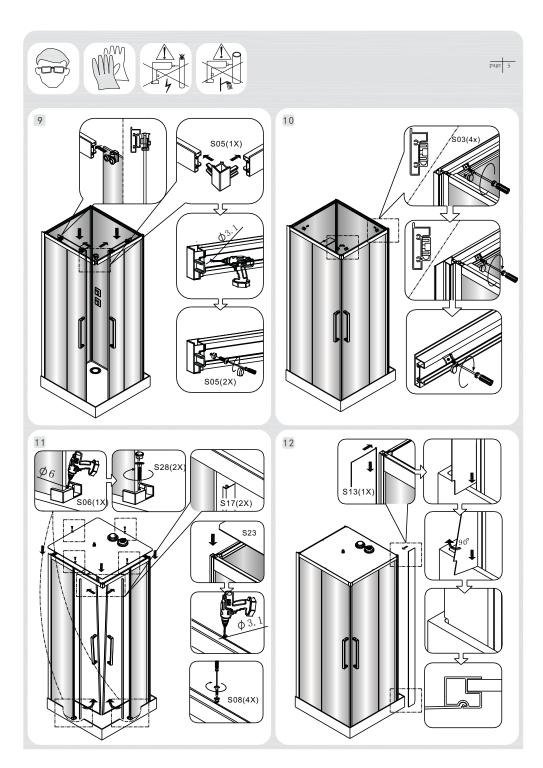


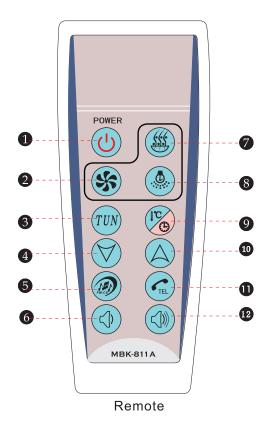

1 Power ON/OFF & Unlock	7 Steam
2 Fan ON/OFF	8Light ON/OFF
3 FM Tuner Plus Key	9Steam
4 Decrease	10 Increase
5 FM/CD	1 Telephone
6 Volume Decrease	12Volume Increase



1 Temperature	8 Ozoner
2 Temperature setting	9Telephone
3 Time setting	10FM tuner
4 ·Radio	•FM tuner setting
6 CD	🕑 Locked mark
6Lack of water	1 3Fan
7 Steam	14Light

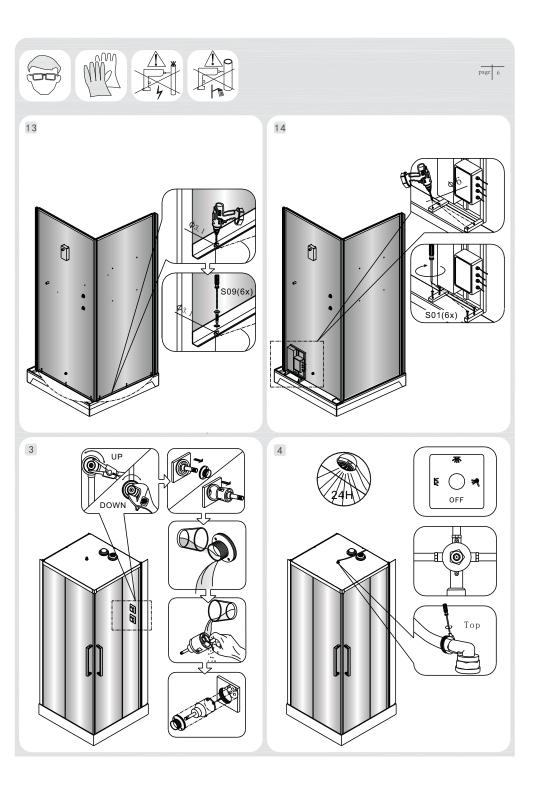





page 7

Control Panel Instruction Manual

